




JET HAWK

WHAT'S INCLUDED

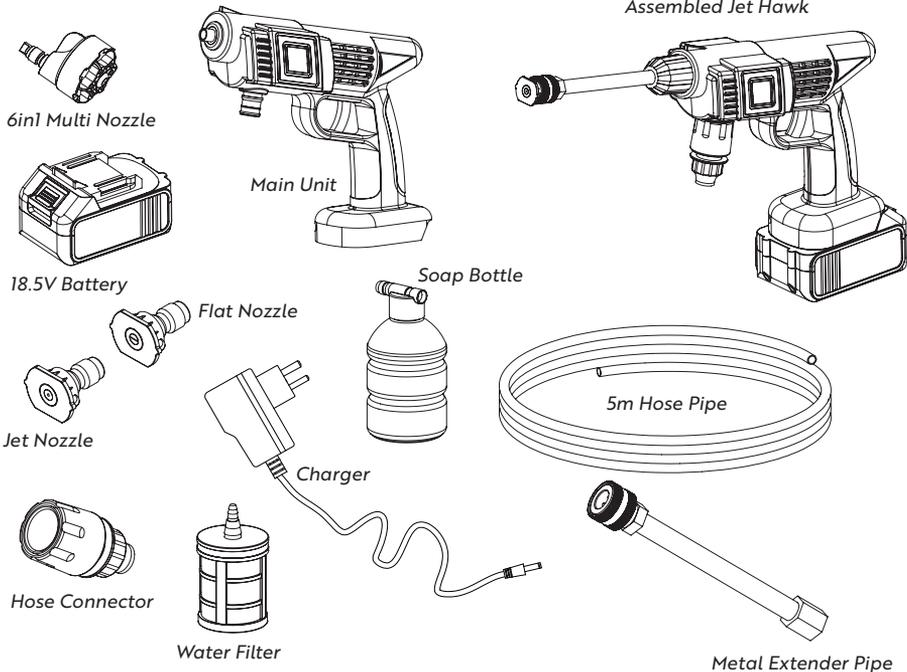

PRODUCT OVERVIEW

The 'Jet Hawk' is a convenient pressure washer that can be used fully cordless and without the requirement for a hose point. It makes cleaning away from the home, or without hose-pipe accessibility a breeze. It is quick and simple to use and doesn't need a power source while in use. The water extracting design means that any clean water source can be used, be it from a bucket/sink, water butt or lake.

PRODUCT SPECIFICATIONS

- Materials: Aluminium/Mild steel/PP/ABS
- Size: 420 x 275 x 75mm
- Weight (in hard case): 2511g
- Weight (Jet Hawk): 1245g
- Battery: 3000MAH
- Power: 18.5V
- Bar: 22Bar
- Run time: 45 mins (approx.)
- Recharge time: 4 hours (approx.)
- Up to approximately 3L per minute water capacity

Note: when connected to pressurised water source, unpressurised water will continuously flow from the Jet Hawk, when not active.


SET UP INSTRUCTIONS

STEP 1




Remove main unit and battery from the box and insert into the lower section of the main spray unit. If this is the first usage out of the box, this will need to be fully charged with the provided main charger. When fully charged LED light on the charger will turn from RED to GREEN.

STEP 2

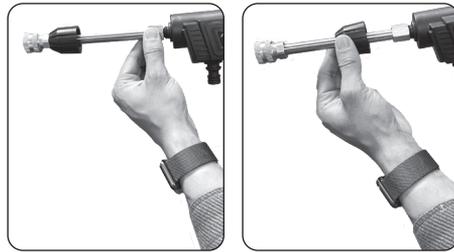


Screw on the Metal extender pipe to the outlet of the main unit, ensuring it is tightened securely. Place the rubberised cover over the connection end of the extender pipe.

STEP 3

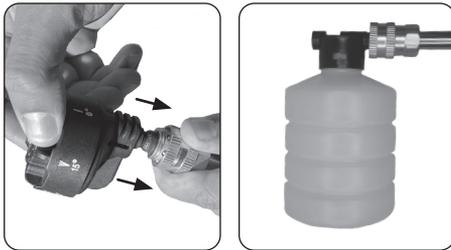

On the opposing end of the extender pipe, now insert the chosen spray nozzle. There is a spring-loaded lock mechanism on the extender pipe that needs to be pulled back and then the nozzle can be inserted. This should then spring forwards again and lock in place. Note: If using the soap bottle, install it as the spray nozzle. It is not necessary to install the spray nozzle in the front of the soap bottle.

STEP 4

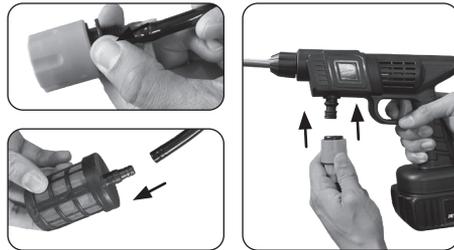

Once the main unit is assembled, take the 5M hose pipe and water filter and connect at one end of the hose. Then, on the opposite end, attach the hose connector to the hose pipe and ensure both are securely fixed in position. This can now be attached to the main unit.

STEP 5



The unit is now ready to use. Insert the water filter into a bucket or clean water source, and pull the trigger, being careful to aim this away from any human contact or directions of danger. Allow a few seconds for the water to be siphoned up the hose and through the unit until a pressured flow of water is coming out of the nozzle. Begin use.

Note: If any water flow is limited or not responsive, check water is being extracted and is not being blocked by either the water filter or a kink within the hose line.



*To use the soap bottle: unscrew the lid, fill with your chosen cleaning detergent and screw the lid back on. Note: detergent may require diluting for dispensing. See chosen detergent care instructions for further advise on using in conjunction with a spray gun.

POWER WASHING SAFETY INSTRUCTIONS

PRODUCT SAFETY WARNINGS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance.

When connected to a hose pipe or a pressurized water source, please note water will constantly flow out of the nozzle.

The appliance is only to be used with the power supply unit provided with the appliance. Use only with model number DW-168-08.

The liquid must not be directed towards equipment containing electrical components.

Remove or disconnect the battery pack after use and before carrying out user maintenance on the appliance.

The appliance is not to be used if it has been dropped, or visible signs of damage or if it is leaking.

Keep the appliance out of reach of children when the battery pack is charged and connected.

SAFETY WARNINGS FOR BATTERY PACK.

DO NOT dismantle, open or shred cells or battery pack.

DO NOT short-circuit a battery pack. DO NOT store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.

When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns

or a fire.

DO NOT expose battery pack to heat or fire. Avoid storage in direct sunlight.

DO NOT subject battery pack to mechanical shock.

In the event of a battery leaking, **DO NOT** allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the area with copious amounts of water and seek medical advice.

Seek medical advice immediately if a cell or battery pack has been swallowed.

Keep battery pack clean and dry.

Wipe the battery pack terminals with a clean dry cloth if they become dirty.

Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.

DO NOT maintain battery pack on charge when not in use.

After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Battery pack gives its best performance when it is operated at normal room temperature. (20C +/-5C).

DO NOT USE any charger other than that specifically provided for use with the equipment. Risk of fire or explosion if another charger is used.

DO NOT use any battery pack which is not designed for use with the equipment.

Keep battery pack out of the reach of children.

Observe the + and – polarity marks on the battery and ensure correct use. **DO NOT** mix cells of different manufacture, capacity, size or type within a device.

Remove the battery from the equipment when not in use.

MAINTENANCE AND STORAGE

Remove the battery pack from the appliance before carrying out any adjustment, servicing or maintenance.

Inspect the appliance for damaged or worn parts before each use. Do not operate it if you find damaged or worn parts. Contact our Contact Centre for replacement parts.

Before storage, completely drain all the water from the machine and hose. Remove battery pack if storing for a long time. Store in a secure, frost free and dry place out of the reach of children.

Maximum pressure: 2.4 Mpa (22 bar). 348 psi.

Maximum water flow rate: Up to 3L per minute (approx.)

DISPOSAL

Washer, accessories and packaging should be sorted for environmentally friendly recycling. This product contains a lithium-ion battery. Do not dispose of battery packs into household waste, water or fire. Please dispose of them at a public recycling centre.



Need help? We're here for you.

Please contact our Customer Services Team on:

Phone: 0344 800 0631 (UK) / 0412 132 998 (Ireland)

Email: customercare@highstreettv.com

For product support FAQ's visit highstreettv.com/support.

**high
street tv**

www.highstreettv.com

DISTRIBUTED BY: HSTV Corby
PO Box 7903, CORBY, NN17 9HY

CD 174 V2 03/23 Model RY-1000